



Door jam Vent

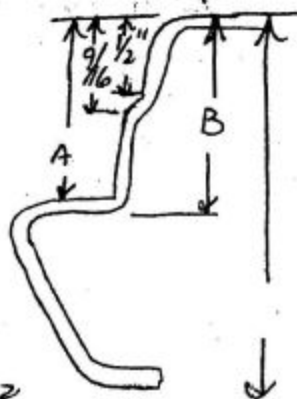

+ 3 inches 1 9/32

<u>Position</u>	<u>Dimension</u>	<u>Raw mat'l</u>	<u>Under</u>
	A B	(B - 3/16)	(A - 9/16)
1	1 1/4 15/16	1 1/8	1 1/16
2	1 1/4 + 15/16	"	"
3	1 1/4 + 15/16	"	"
4	1 1/4 + 15/16	"	"
5	1 1/4 1 9/32	"	"
6	1 3/16 1 1/4	1 1/16	5/8
7	1 3/32 1 5/32	3 1/32	17/32 9/16
8	1 1 1/16	7/8	7/16 15/32
front jam	1 7/8 2 7/32	2 1/32	5/16 3/8

Door jam Vent

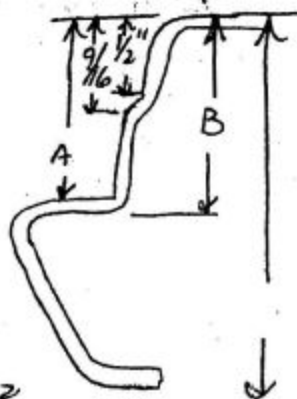

+ 3 inches 1 9/32

<u>Position</u>	<u>Dimension</u>	<u>Flow</u> <u>med'l</u>	<u>Under</u>
	A B	(B - 3/16)	(A - 9/16)
1	1 1/4 15/16	1 1/8	1 1/16
2	1 1/4 + 15/16	"	"
3	1 1/4 + 15/16	"	"
4	1 1/4 + 15/16	"	"
5	1 1/4 1 9/32	"	"
6	1 3/16 1 1/4	1 1/16	5/8
7	1 3/32 1 5/32	3 1/32	17/32 9/16
8	1 1 1/16	7/8	7 1/16 15/32
front jam	1 7/8 2 7/32	2 1/32	5 1/16 3/8

DOOR SILL

