

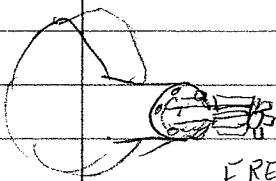
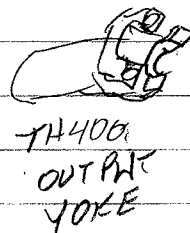
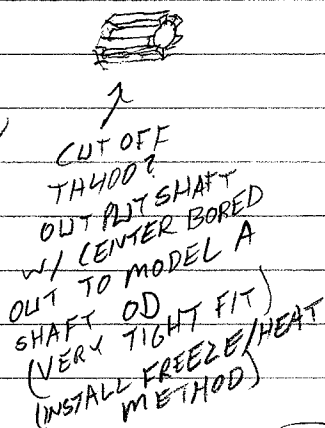




# MODEL A BANJO CONVERSION TO OPEN DRIVE

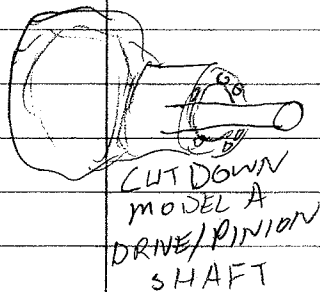


THEN WELD BORE OUTPUT  
SPLINES ON MODEL A SHAFT

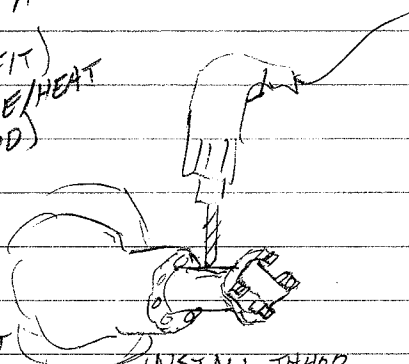

DISASSEMBLE

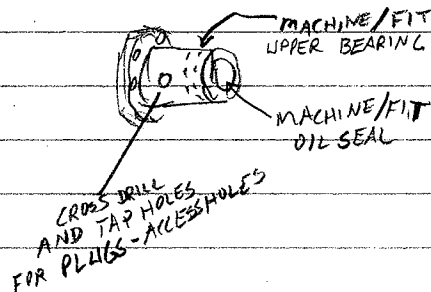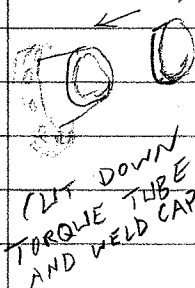

CROSS SECTION

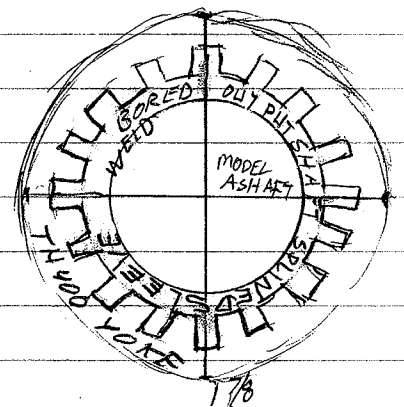

INSTALL  
TORQUE TUBE PIECE  
OVER MODEL A SHAFT  
DRIVING UP CROSS DRILLED HOLES  
SLIDE TH400 YOE AND INSTALL  
AND BEARING AND INSTALL  
SHOULDER SCREW THRU ACCESS HOLES  
(LUBE AS NECESSARY AND INSTALL  
ACCESS HOLE PLUGS)

10-10-10